

# ***Installation of FireFighter<sup>®</sup> Eliminator F & C***

FireFighter Eliminator F and C are pumped into the piping using the antifreeze excess pressure pumping system. Air vent valves or manual bleed valves must be installed at the highest point and most remote points on the tree piping system in order to vent out all the air during the fill. Additional vent valves shall be installed on the end-of-line piping to ensure air is vented from the system.