


# CONTROL JOINT OR CRACKED SUBSTRATE (FULL COVERAGE)

(NOT TO SCALE)

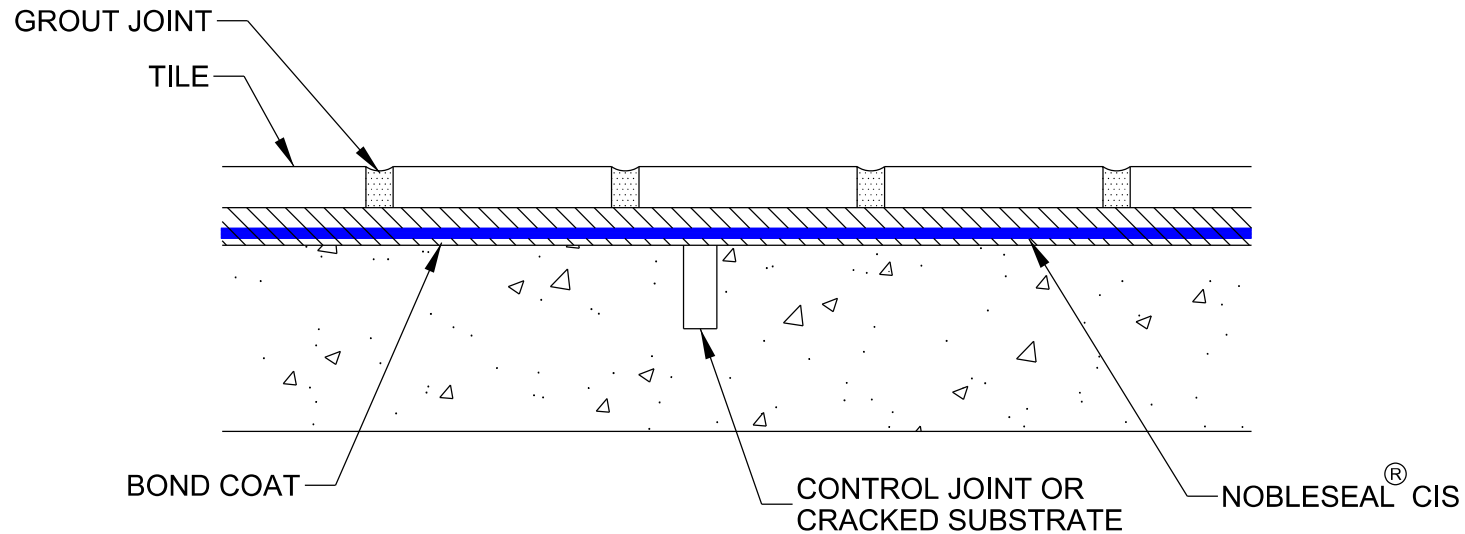

CONTROL JOINTS (CONSTRUCTION, ISOLATION, CONTRACTION)

## NOTES:

1. ADDITIONAL SOFT JOINTS CLOSE TO JOINTS/CRACKS IN SUBSTRATE ARE NOT REQUIRED WHEN NOBLESEAL IS INSTALLED UNDER ALL TILE
2. USE OF NOBLESEAL DOES NOT NEGATE THE NEED FOR MOVEMENT JOINTS IN THE TILE FIELD IN ACCORDANCE WITH TCNA DETAIL EJ171.



**Noble Company**  
 7300 Enterprise Drive, Spring Lake, MI 49456  
 Phone: 231-799-8000  
 Toll Free: 800-878-5788  
 Fax: 231-799-8850  
 Email: sales@noblecompany.com

Revision Date:				
	Δ	Δ	Δ	Δ

Project:	Product Installation Details
Drawing Title:	CONTROL JOINT OR CRACKED SUBSTRATE FULL COVERAGE
Drawn By:	RJL
Date:	MAY 21ST 2015
File Name:	CONTROL_JOINT_OR_CRACKED_SUBSTRATE_FULL_COVERAGE
Sheet:	

REF: TCNA DETAIL F125-FULL COVERAGE