
ProBase® II Multi-Slope

Shower Base Kit

www.noblecompany.com

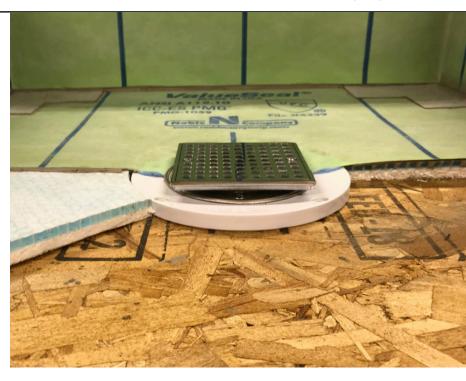





Drain sold separately Patents Pending

KIT INCLUDES: Pre-Sloped Base, ValueSeal® Waterproofing Sheet Membrane, Solid Curbs, Thin-Line™ Installation Accessories, and NobleSealant

Multi-Slope Shower Base

Quick and easy installation with modified thin-set mortar or NobleBond EXT to provide the code-required slope to drain.

Base is designed to provide a smooth transition to Noble Company's Freestyle Thin-Bed™ Drain. Kit includes Pre-Sloped Base, ValueSeal Waterproofing Sheet Membrane, Solid Curbs, Thin-Line Installation Accessories, and NobleSealant.

BENEFITS

- · Multi-Directional slope to drain
- · Superior impact resistance
- · Sloped honeycomb and foam composite base
- · Noble waterproofing sheet membrane bonds directly to base
- · Center or offset drain location
- · Integration with FreeStyle Thin-Bed Drain
- · Easily modified to various shower configurations
- · Install with NobleBond EXT or modified thin-set mortar

STANDARD SIZES:

- 32" x 60" End Drain Base Kit
- 32" x 60" Center Drain Base Kit
- 48" x 48" Center Drain Base Kit
- 72" x 72" Center Drain Base Kit
- · Custom sizes available with minimum quantity order












ProBase® II Multi-Slope

Shower Base Kit






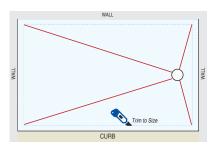

32" x 60" End Drain Kit

#4610


INCLUDES: 32"x60" Composite Base, 132 sf of ValueSeal, (2) 30" curbs, Thin-Line Combo Pack, and NobleSealant

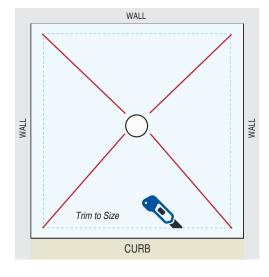

72" x 72" Center Drain Kit

#4820


INCLUDES: 72"x72" Composite Base, 200 sf of ValueSeal, (2) 36" curbs, Thin-Line Combo Pack, and NobleSealant

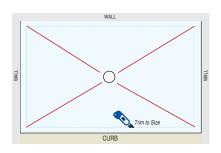

32" x 60" Center Drain Kit

#4620

INCLUDES: 32"x60" Composite Base, 132 sf of ValueSeal, (2) 30" curbs, Thin-Line Combo Pack, and NobleSealant

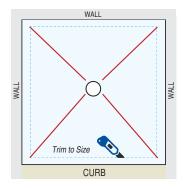

48" x 48" Center Drain Kit

#4720

INCLUDES: 48"x48" Composite Base, 150 sf of ValueSeal, (1) 48" curb, Thin-Line Combo Pack, and NobleSealant



Sloped Base Pieces

Patents Pending

The multi-sloped design seamlessly integrates with Noble Company's FreeStyle Thin-Bed Drain™



ValueSeal® Waterproofing Sheet Membrane

Ultra-thin waterproofing membrane designed for bonded applications.



Noble Solid Curbs

Durable, preformed curbs are easy to install.



Noble Thin-Line™ Inside and Outside Corners

A fast and easy way to protect against leaks in corners.



Noble Thin-Line Pipe Collar and Mixing Valve Collar

Convenient, easy-to-use accessories to seal around pipes and valves.



NobleSealant

Polymeric sealant for seaming waterproofing sheet membrane to drain body.

CUSTOM SIZES AVAILABLE UPON REQUEST

BARRIER-FREE DETAIL



See www.noblecompany.com for detailed instructions for barrier-free installations

Barrier-Free Installation

- Cut and remove subfloor per shower size
- · Add support at floor joists to lower subfloor
- · Add new subfloor
- · Install Thin-Bed Drain
- · Install ProBase II Base
- Install CBU
- Waterproof

