

PRO-SLOPE™

Installation Instructions

www.noblecompany.com

APPLICATIONS

Showers: PRO-SLOPE provides the code-required slope to weep holes in a clamping-ring drain in the shower receptor. Install PRO-SLOPE under a mortar bed (minimum thickness of 1½"). Follow ANSI standards, TCNA recommendations, and local plumbing codes.

NOTE: A sheet membrane like Chloraloy® must be installed over PRO-SLOPE.

HOW TO SPECIFY

Specify in Division 9 or 22. Install PRO-SLOPE under the waterproofing sheet membrane to provide a slope of at least ¼" per foot to the weep holes in a shower receptor drain.

PRODUCT DIMENSIONS

- PRO-SLOPE 4040 = 40" × 40", thickness: ⅛" to 1"
- PRO-SLOPE 2040 Small Tapered Extension = 20" × 40", thickness: 1" to 1⅞"
- PRO-SLOPE 2040 Flat Extension = 20" × 40", thickness: 1"
- PRO-SLOPE 6060 = 60" × 60", thickness: ⅛" to 1¼"
- PRO-SLOPE 3060 Tapered Extension = 30" × 60", thickness: 1¼" to 1⅞"
- PRO-SLOPE 3060 Flat Extension = 30" × 60", thickness: 1¼"
- PRO-SLOPE 4080 Tub Replacement = 40" × 80", thickness: ⅛" to 1⅞"

PLANNING & LAYOUT

Installation notes (read all instructions prior to commencing work):

- a. Substrate must meet industry standards. Substrate must be flat and level.
- b. Installer should follow industry standards, local building codes, and TCNA recommendations.
- c. For tub replacement, use a PRO-SLOPE 4080 Tub Replacement which consists of: one PRO-SLOPE 4040, one PRO-SLOPE Small (thin) Tapered Extension, and one PRO-SLOPE Large (thick) Tapered Extension.
- d. If you are installing a PRO-SLOPE and the distance from the center of the drain to the wall exceeds the size of the PRO-SLOPE, choose one of the following:
 - i. Use a PRO-SLOPE Tapered Extension.
Note: These provide a code-required slope.
 - ii. If a slope is not required, use a PRO-SLOPE Flat Extension.
Note: These extensions are not sloped, but may be used for non-standard configurations.
 - iii. Extend the slope to the wall with mortar. If mortar is used to extend a slope on a wood subfloor, install a moisture barrier over the subfloor prior to the mortar.

INSTALLATION

1. Select the PRO-SLOPE size best suited for your project: PS4040 (40" × 40"), PS6060 (60" × 60"), or PS4080 Tub Replacement.
2. Unfold and place PRO-SLOPE outside the shower (in the same position as if PRO-SLOPE was in the shower) with printing facing upward.
3. Measure shower from the center of the drain to each wall (see Figure 1).
4. Mark measurements on PRO-SLOPE. Follow this procedure for each wall to drain measurement (see Figure 2).
Note: A utility knife can be used to cut PRO-SLOPE.
5. Install PRO-SLOPE with the printed side facing upwards.
Note: Do not remove the cardboard cutting template from the EPS.
6. Install sheet waterproofing membrane (e.g., Chloraloy®) per the manufacturer's instructions over PRO-SLOPE.
7. Place a POSITIVE WEEP PROTECTOR™ (PWP) around the threaded neck of the drain strainer on top of clamping ring.
8. Install a mortar bed over the waterproofing membrane (1½").

Note: If your installation requires deviation from the noted instructions above, please contact Noble Company for technical support.

Figure 1. (not to scale)


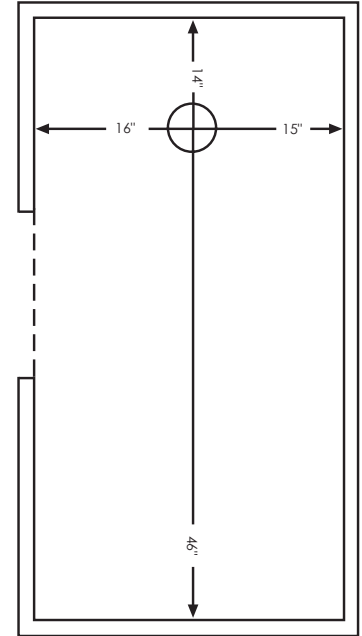


Figure 2. (not to scale)

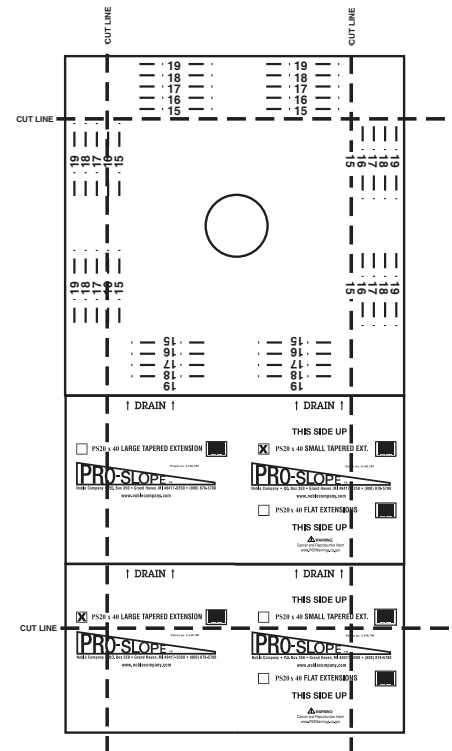

7300 Enterprise Drive, Spring Lake, MI 49456 · (800) 878-5788
 Fax: (231) 799-8850 · www.noblecompany.com
 © Registered Trademark of Noble Company, Spring Lake, MI.
 ™ Trademark of Noble Company © 2021 Noble Company

File # PS112021-12 | 11/21 | Supersedes PS102020-07

VIEW MORE PRODUCT
 DETAILS, VIDEOS,
 AND DIAGRAMS ONLINE

