


Accessible Shower Area Full Mortar Bed Method

Technical Bulletin #014

www.noblecompany.com

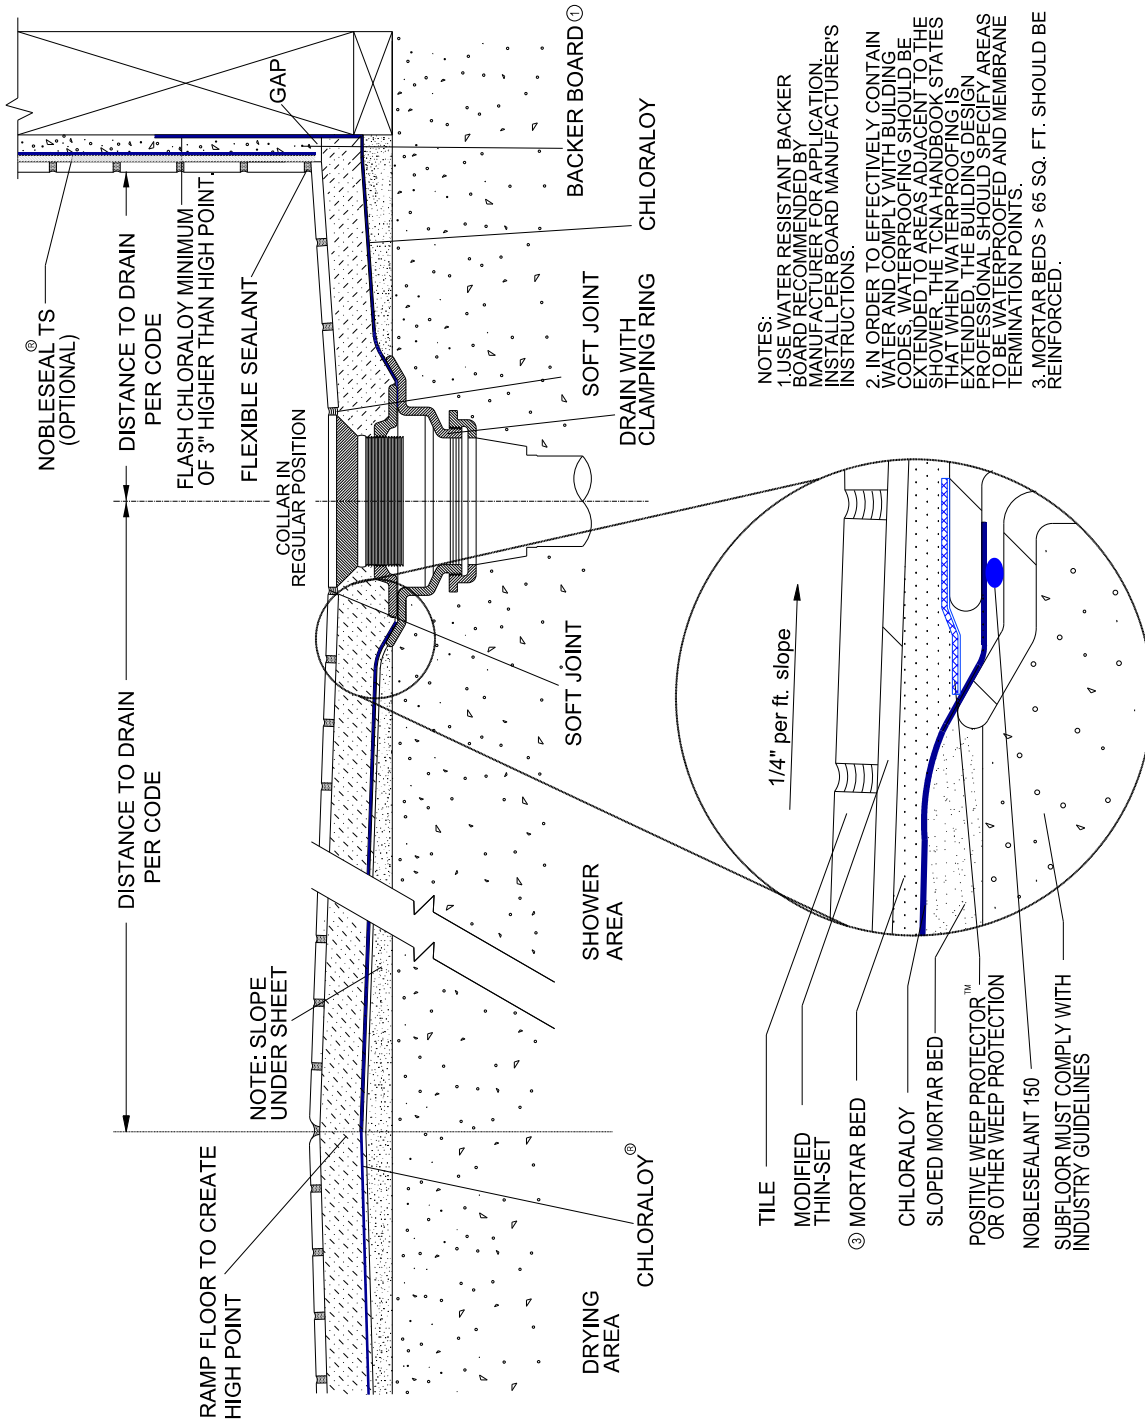

- NOTES:
1. USE WATER RESISTANT BACKER BOARD RECOMMENDED BY MANUFACTURER FOR APPLICATION. INSTALL PER BOARD MANUFACTURER'S INSTRUCTIONS.
 2. IN ORDER TO EFFECTIVELY CONTAIN WATER AND COMPLY WITH BUILDING CODES, WATERPROOFING SHOULD BE EXTENDED TO AREAS ADJACENT TO THE SHOWER. THE TCNA HANDBOOK STATES THAT WHEN WATERPROOFING IS EXTENDED, THE BUILDING DESIGN PROFESSIONAL SHOULD SPECIFY AREAS TO BE WATERPROOFED AND MEMBRANE TERMINATION POINTS.
 3. MORTAR BEDS > 65 SQ. FT. SHOULD BE REINFORCED.

Not to Scale



P.O. Box 350 · Grand Haven, MI 49417-0350 · 800-878-5788 · Fax: 231-799-8850

© Registered Trademark of Noble Company
™ Trademark of Noble Company, Grand Haven, MI.
© 2016 Noble Company · www.noblecompany.com


File #TB072016-11 | 08/16 | Supersedes TB022015-02



Accessible Shower Area Thin-Set Method

Technical Bulletin #014

www.noblecompany.com

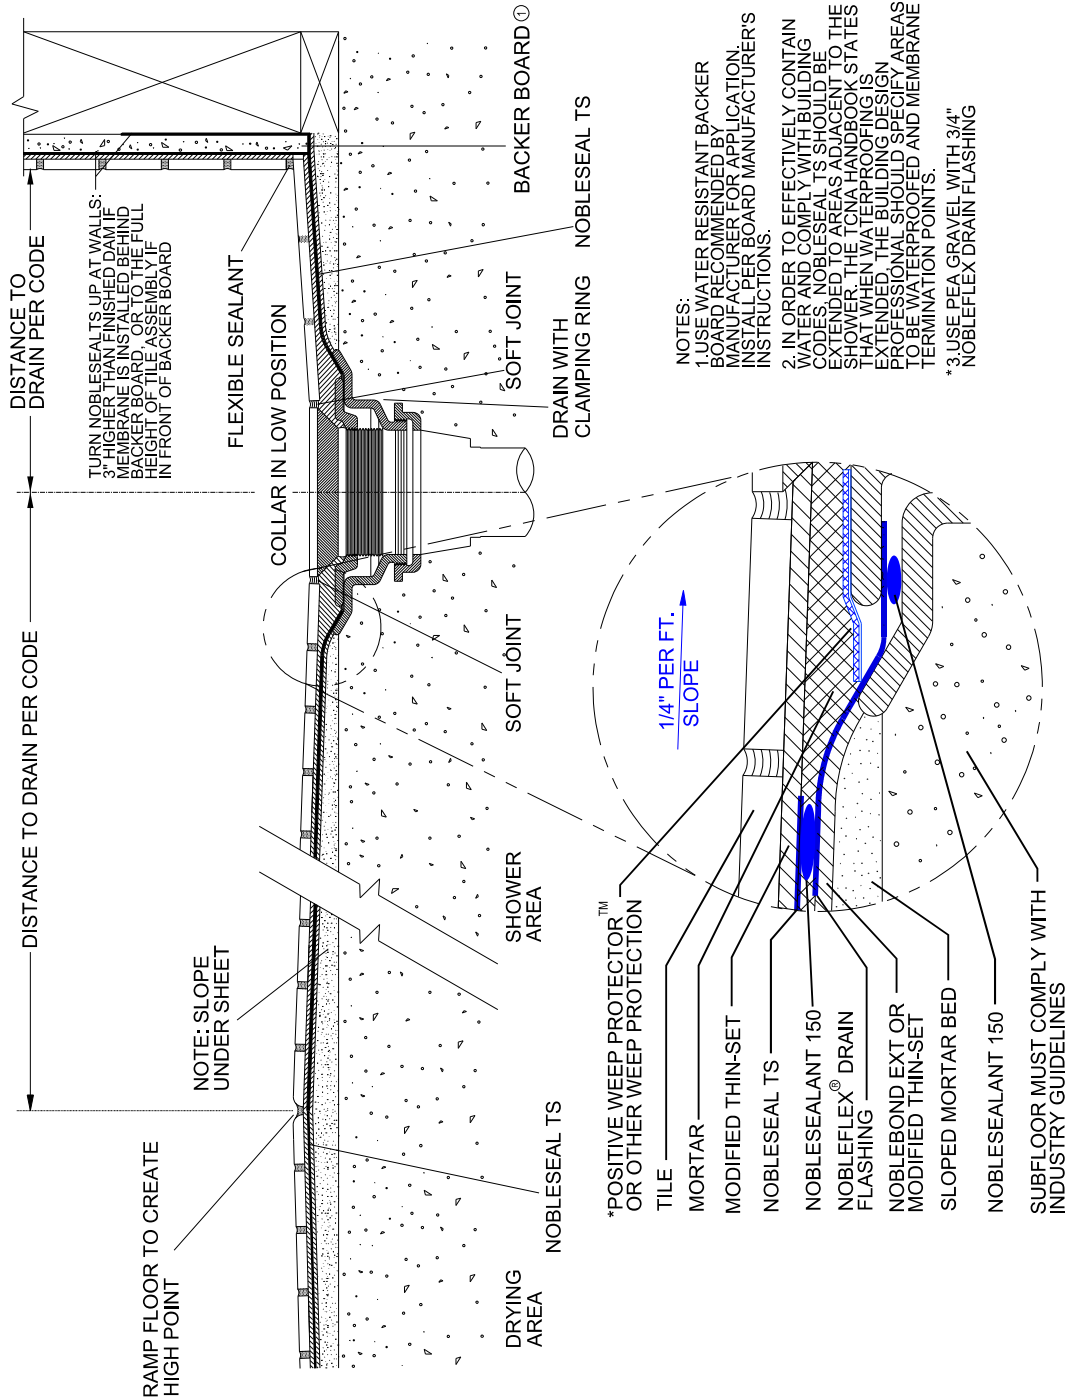

- NOTES:
1. USE WATER RESISTANT BACKER BOARD RECOMMENDED BY MANUFACTURER FOR APPLICATION. INSTALL PER BOARD MANUFACTURER'S INSTRUCTIONS.
 2. IN ORDER TO EFFECTIVELY CONTAIN WATER AND COMPLY WITH BUILDING CODES, NOBLESEAL TS SHOULD BE EXTENDED TO AREAS ADJACENT TO THE SHOWER. THE TCNA HANDBOOK STATES THAT WHEN WATERPROOFING IS EXTENDED, THE BUILDING DESIGN PROFESSIONAL SHOULD SPECIFY AREAS TO BE WATERPROOFED AND MEMBRANE TERMINATION POINTS.
 - *3. USE PEA GRAVEL WITH 3/4" NOBLEFLEX DRAIN FLASHING

Not to Scale

Follow TCNA Recommendations



P.O. Box 350 · Grand Haven, MI 49417-0350 · 800-878-5788 · Fax: 231-799-8850
 © Registered Trademark of Noble Company
 ™ Trademark of Noble Company, Grand Haven, MI.
 © 2016 Noble Company · www.noblecompany.com
 File #TB072016-11 | 08/16 | Supersedes TB022015-02

