

Noble Curbs

Installation Instructions

www.noblecompany.com

1. PRODUCT & MATERIALS

- 1.1 Noble Curbs are made from high density, expanded polystyrene (EPS) and coated with an acrylic polymer finish. Noble Curbs are waterproof and ready-for-tile. They are lightweight, durable, and are not a food source for fungus and mold.
Other Tools & Materials Needed for Curb Overlays: Utility knife, caulk gun, NobleSealant 250, and large headed fasteners.
Other Tools & Materials Needed for Solid Curbs: Fine tooth saw, modified thin-set mortar, and NobleSealant 250.

2. PREPARATORY WORK


- 2.1 Substrate should be level and flat prior to commencing work. Read all instructions.

Noble Curb Overlay Installation Instructions

3. INSTALLING CURB OVERLAY

NOTE: Noble Curb Overlay should be installed prior to installation of full mortar bed and after waterproof membrane.

- 3.1 Cut Curb Overlay to length.
- 3.2 Coat inside of Curb Overlay with modified thin-set mortar and place over shower pan liner.
- 3.3 Noble Curb Overlay should rest firmly on curb structure.
Thin-set coating should provide leveling and support for the Noble Curb Overlay.
- 3.4 After Noble Curb Overlay is leveled, secure with large headed fastener on outside apron.
- 3.5 Caulk with NobleSealant 250 where the Curb Overlay meets the wall/jamb.

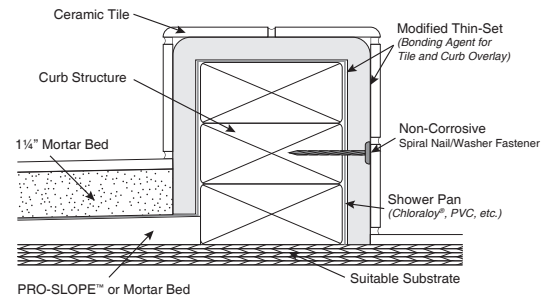


Noble Solid Curb Installation Instructions

3. INSTALLING SOLID CURB



NOTE: Noble Solid Curb should be installed prior to installation of shower pan.

- 3.1 Cut Noble Solid Curb to desired length and dry fit.
- 3.2 Apply modified thin-set mortar to floor.
- 3.3 Apply modified thin-set mortar to bottom and both ends of curb.
- 3.4 Embed Curb into thin-set.
NOTE: Weight (i.e., boxes of tile) can be applied to embed Curb into thin-set.
- 3.5 Carefully remove excess thin-set.
- 3.6 Allow thin-set to cure.
- 3.7 Caulk with NobleSealant 250 where Curb meets wall/jamb.
- 3.8 Install waterproof membrane (ANSI A118.10) per manufacturer's instructions, applicable standards, and TCNA guidelines.
- 3.9 Extend waterproofing membrane (i.e. NobleSeal® TS) up and over Curb.
NOTE: NobleSeal membranes may be bonded to Curb using modified thin-set.

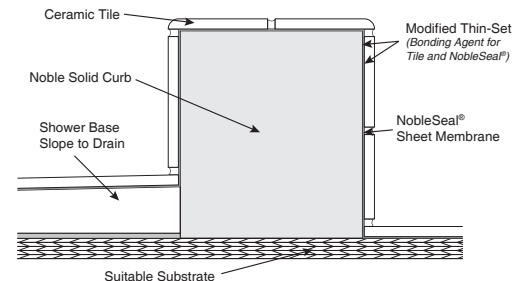

4. TILE INSTALLATION: Install tile using modified thin-set per industry guidelines.

NOTE: For any situation not specifically covered, contact Noble Company's Technical Department at 1(800) 878-5788 before proceeding. Follow TCNA Guidelines.

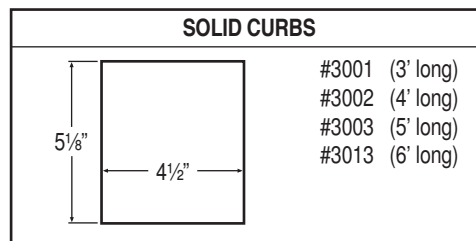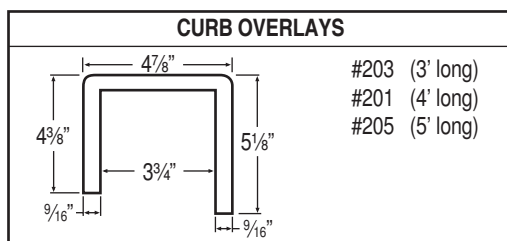

Note: Actual dimensions may vary +/- 1/8"



7300 Enterprise Drive, Spring Lake, MI 49456 · (800) 878-5788
Fax: (231) 799-8850 · www.noblecompany.com
® Registered Trademark of Noble Company
™ Trademark of Noble Company, Spring Lake, MI. © 2022 Noble Company
File # NC102022-02 | 10/22 | Supersedes NC022022-13

VIEW MORE PRODUCT
DETAILS, VIDEOS,
AND DIAGRAMS ONLINE

